

# INSTALLATION INSTRUCTIONS

## Weed Control

### Step 1

Strip away all existing sod, grasses & weeds in desired area to be landscaped.



### Step 2

Unroll fabric and measure to size allowing enough to go over existing plants to amply reach edging.



### Step 3

Cut X where each plant will be or cut an X large enough to pull the existing plant gently through.



### Step 4

Plant your plant or pull Fabricscape's over existing plant, be gentle with branches and tuck the corners of fabric around plant stem.



### Step 5

Generously arrange decorative stone or bark around plants to ensure protection of Fabricscape's from sunlight.



## Patio/Paver Underliner


### Step 1

Excavate area to desired depth to accommodate stone, sand and brick.




### Step 2

Fill area with crushed stone and compact with vibrator.

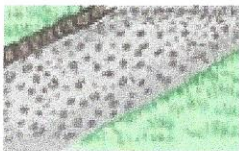


### Step 3

Place Fabricscape's Patio/Paver Underliner over crushed stone base.

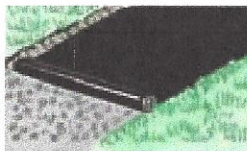

### Step 4

Spread a 2" layer of course sand over the fabric and level in preparation for setting brick in place.

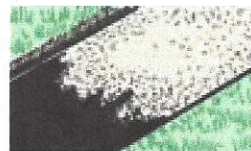

### Step 5


Place bricks in desired pattern and spread sand in cracks & vibrate into place.



## Filter Fabric


### Step 1

Excavate site and shape to a smooth desired depth.

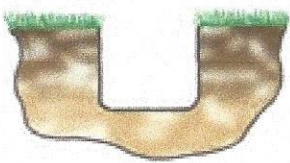


### Step 2

Place Fabricscape's fabric directly on surface, leaving room for overlap.

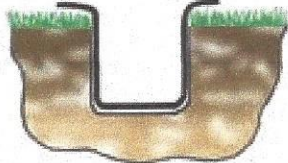


### Step 3

Fill with aggregate and place pipe according to specifications.

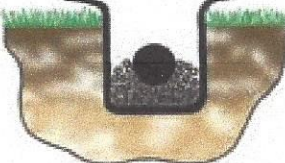

### Step 4


Fill remaining site with appropriate aggregate.

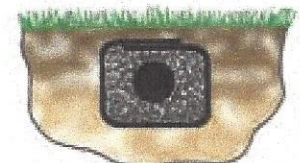

## FabriJute®


### Step 1

Prepare the ground surface either by mechanical means and/or raking to as smooth a surface as possible.

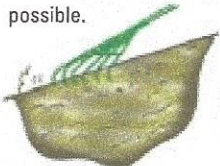


### Step 2

Seed and fertilize the area.

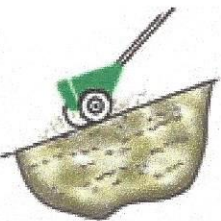


### Step 3

Unroll FabriJute down slope, without stretching the material.

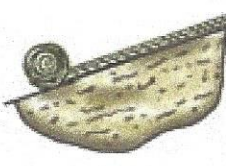

### Step 4

Anchor the mat by placing pins at 4 ft. and 1 ft. staggered intervals in adjacent panel overlap area.

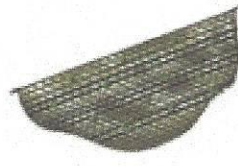

### Step 5

Overlap the end of each roll and adjacent panel sides at least 4". Anchor the top, bottom, any end of roll overlaps.

